



abode

A p p l i a n c e s

Cyclonic Vacuum Cleaner



For Household Use Only

Model No.: STX-006E-140
Item No.: 900059
220 - 240Va.c. 50Hz
1600W Max
Rev 4

Note: The specifications and/or components of this appliance are subject to change without prior notice.

1	Warnings	3
2	Safety Direction	3
3	Transporting your Vacuum	4
4	Specification	4
5	Components	5
6	Assembly Method	6
	6.1 Fitting Flexible Hose.....	6
	6.2 Hose Removal.....	6
	6.3 Fitting Tube and Accessories.....	6
	6.4 Tools.....	7
7	Power and Cord	7
8	Floor Head	8
9	Safety Device Operation	8
10	Emptying the Dust Collector	9
11	User Maintenance	10
	11.1 Cleaning Filters.....	10
	11.1.1 Main Filter	10
	11.1.2 Pre Motor Filter	11
	11.1.3 Exhaust Filter	12
	11.2 Cleaning the Vacuum Cleaner and Components	13
12	Troubleshooting	13
13	Guarantee	14

1 Warnings

Before using this appliance, read and follow all warnings and instructions in this manual, even if you are familiar with this product.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Young children should be supervised to ensure that they do not play with the appliance.

2 Safety Direction

Please read this instruction manual carefully before first use. It is advisable to keep this instruction manual for future reference.

CAUTIONS:

DO NOT vacuum water, wet objects, liquids, flammable materials, burning objects or ashes

DO NOT vacuum Toner (for laser printer, copy machines etc) as there is a risk of fire and explosion.

DO NOT vacuum plaster, cement etc. as the filter can become blocked

DO NOT use the vacuum without all the filters fitted.

DO NOT store or use the appliance near high temperature areas.

DO NOT run over the power cord with the vacuum cleaner.

DO NOT use the vacuum cleaner if it is blocked. Turn off and clear all blockages before continuing.

DO NOT use the vacuum cleaner with blocked filters. Clean filters before continuing. (refer to User Maintenance section).

DO NOT use the vacuum cleaner if abnormal noise, smell, smoke or any breakage is found during operation, you should switch off and unplug the appliance. Do not repair by yourself. It must be repaired by the manufacturer, our customer service department or a similarly qualified person.

DO NOT use the vacuum cleaner if the power cord, switch or motor is damaged Do not repair by yourself. It must be repaired by the manufacturer, our customer service department or a similarly qualified person.

DO NOT use the vacuum cleaner to pick up large objects that are likely to cause damage.

DO Empty the Dust Cup regularly for optimal operation of the vacuum.

DO Keep hair, loose clothing, fingers, feet and body parts away from openings or moving parts.

Cord Rewind - **DO NOT** allow the cord and plug to whip back at full speed. Guide the cord and plug in gently.

ONLY for domestic use. Industrial or commercial use invalidates the warranty.

3 Transporting your Vacuum

To move your vacuum cleaner from room. to room, unplug the unit and carry using the carry handle.

Never pull the vacuum cleaner by its cord or the flexible hose when moving.

 
4 Specification

Supply: 220 - 240Va.c. 50Hz

Rated Power: 1600W Max

5 Components

1. Hose Coupling / Air inlet
2. Dust Collector Handle
3. Dust Collector Release Button
4. Cord Rewind Button
5. Power On / Off Button
6. Vacuum Head Parking Location
7. Dust Collector
8. Wheels
9. Speed Regulator

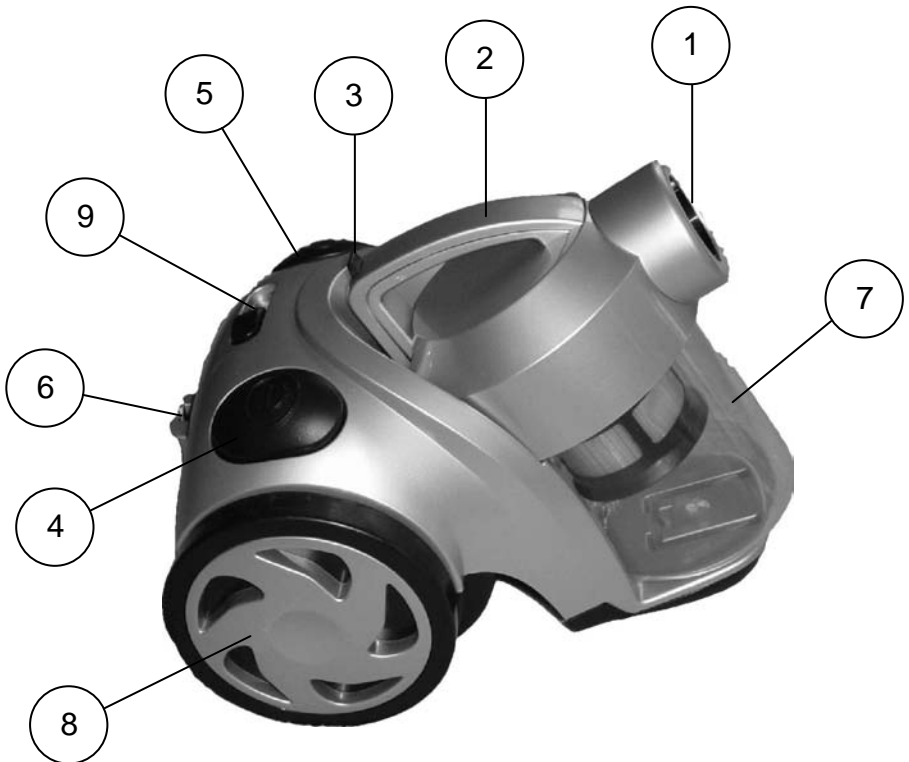

6 Assembly Method

Please Note: Always remove the plug from the power socket before fitting or removing accessories

6.1 Fitting Flexible Hose

Insert the coupling end of the vacuum cleaner hose into the Hose Coupling / Air inlet hole and push inward until it locks into place.

You may need to squeeze the side clips inward which are located on the hose coupling.

 


6.2 Hose Removal

To remove flexible hose from the vacuum cleaner, squeeze the side clips inward and pull straight out.

6.3 Fitting Tube and Accessories

- Take the two straight tubes and insert the end of one tube into the other.
- Insert the handle (1) into the upper end of the tube (2).
- Insert the lower end of the tube (4) into the Floor Head (3).

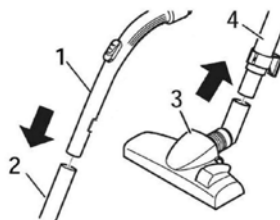

6.4 Tools

 
The Upholstery tool is used for cleaning the material on chairs and sofas etc.

The Crevice tool is used for cleaning down the side of sofas and into corners, etc.

The Crevice tool with brush is used for cleaning grilles and vents, etc.

7 Power and Cord

- Before using the appliance, unwind a sufficient length of cord and insert the plug into the power supply.
- The yellow mark on the cord shows the ideal cord length.
- Do not extend the cord past the red mark.
- To rewind the cord, press the Cord Rewind Button whilst controlling the cord with the other hand to ensure that it does not whip back causing damage to your person or surroundings.
- Insert the power plug.
- Press the On / Off button.
- You can adjust the vacuum cleaner power by sliding the power control knob on the vacuum cleaner.
- Decrease power for cleaning curtains, books, furniture, etc.
- Increase power for cleaning the bare floor.

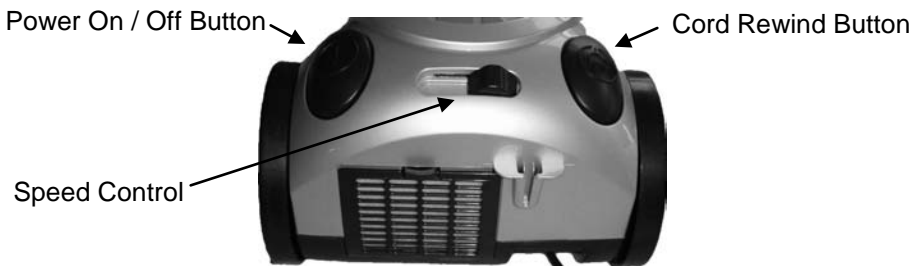

8 Floor Head

The floor head is adjustable to suit either hard floors or carpets.

Press the lever down to Extend the brush

Press the other lever down to Retract the brush

- Hard Floors – Extend Brush
Laminate flooring, tiles, vinyl etc.
- Carpet – Retract Brush
Long and short pile carpets, runners etc



9 Safety Device Operation

NOTE: The vacuum has an overheating protection device.

It will automatically switch off power to the motor if it overheats. eg. from blocked nozzles, full dust container or unclean filters.

 
If this happens, turn off the vacuum and unplug from power socket, clean blockage and / or filters and allow to rest for at least 45 minutes which should be enough time for the motor to cool down.

Note: If the over-temperature device activates and turns the motor off, and you do not unplug the appliance from the power point, the motor will restart automatically after it has cooled down enough to reset the safety device.

10 Emptying the Dust Collector

Empty the Dust Collector as frequently as possible or when the suction power is reduced.

To remove the Dust Collector, firmly press the release button outward (located on the Dust Collector Handle) and pull the Dust Collector up and out of the housing.

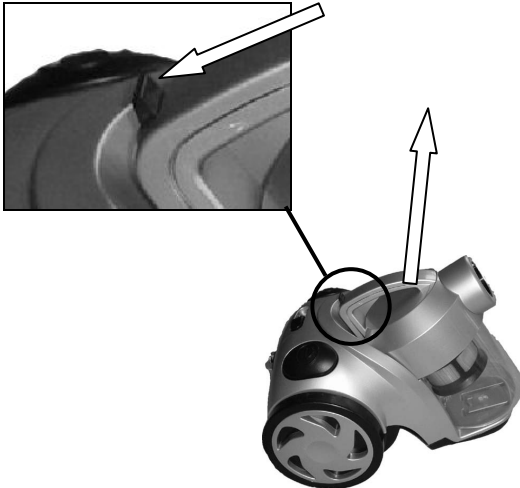

Unscrew the clear bin from the upper handle assembly by rotating the clear bin anti-clockwise (when viewing from the top) Empty the contents into a rubbish bin.



The inside of the Dust Collector and the filter can be wiped clean or washed in warm soapy water and dried thoroughly. (Refer Maintenance Section).

Refit the clear bin by locating back in place and rotating clockwise (when viewing from the top).

11 User Maintenance

WARNING: The plug must be removed from the power socket before any maintenance or replacement.

NOTE: To maximise the performance of your vacuum cleaner, you should clean your filters regularly.

If the filters are broken or worn, replace them before continuing to use the vacuum.

Filters can be purchased from the distributor on 1800 079 124.

11.1 Cleaning Filters

11.1.1 Main Filter

Important Note – the Main Filter must be cleaned regularly for best suction performance and to prevent over-heating and damage to your vacuum cleaner.

Remove the Main Filter by opening the base of the Dust Collector, grasping the Main Filter, rotating it clockwise (when viewing from the top).and pulling straight out.

Remove the outer filter mesh tube by pulling it straight off the end of the main filter.



Wash the Main Filter and Mesh Filter in warm mild soapy water with help from a soft bristle brush, rinse in clean fresh cold water and let dry.

 
DO NOT harshly scrub the filters or place in a dishwasher.

DO NOT use a hair drier to dry the filters.

NOTE: Never use the vacuum cleaner with wet or damp filters.

Replace the mesh filter by locating it back over the Main filter then push straight on.


Note: The mesh filter can only be fitted in one direction. Ensure there is no gap at the bottom. If there is a gap, turn the mesh filter over.

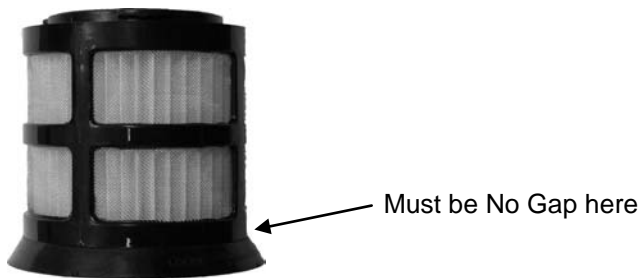

Replace the filter assembly by locating it inside the Dust Collector, pushing in and rotating it anti-clockwise (when viewing from the top) until it locks firmly in place.

11.1.2 Pre Motor Filter

 The round pre-motor filter is located behind the dust collector in the housing.

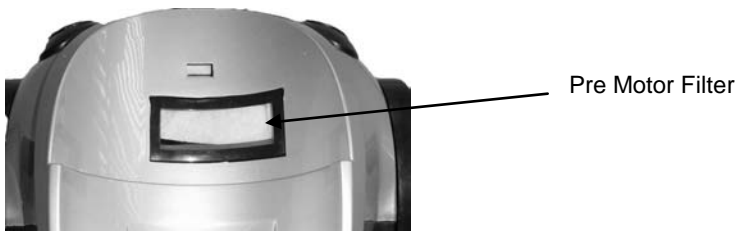

It is recommended to clean this filter every 3 months or sooner if required.

To remove, grasp with your fingers and pull straight up and out.

Wash the Pre Motor Filter in warm mild soapy water, rinse in clean fresh cold water and lay out flat to dry.

DO NOT scrub the filter or place in a dishwasher.

 
DO NOT use a hair drier to dry the filter.

NOTE: Never use the vacuum cleaner with a wet or damp filter.

Replace the Pre Motor Filter by locating in the slot in the Vacuum cleaner housing and pushing in firmly.

11.1.3 Exhaust Filter

The exhaust filter is located inside the rear grille.

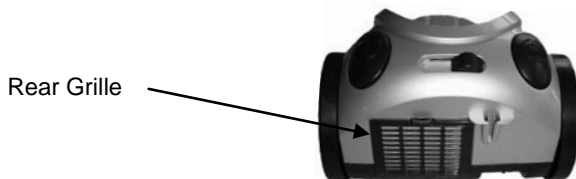

It is recommended to clean this filter every 3 months or sooner if required.

To remove the grille, press the spring loaded catch Down then pull the grille out.

Wash the Exhaust Filter in warm mild soapy water, rinse in clean fresh cold water and lay out flat to dry.

DO NOT scrub the filter or place in a dishwasher.

DO NOT use a hair drier to dry the filter.

NOTE: Never use the vacuum cleaner with a wet or damp filter.



Replace the Exhaust Filter.

Refit the grille to the vacuum cleaner ensuring it is located and latched correctly.

11.2 Cleaning the Vacuum Cleaner and Components

Do not clean the vacuum cleaner, components or accessories using petrol or any other flammable liquid or solvents, etc.

Clean only the outside of the vacuum cleaner.

Use only a moist cloth and mild detergent for cleaning the vacuum cleaner, components and accessories.

After cleaning, wipe off the moisture on vacuum cleaner, components and accessories with a dry cloth.

Do Not place accessories and components in a dishwasher.

12 Troubleshooting

Noisy operation	Clean the Filter and empty the Dust Collector
Suction Not Strong	Clean the Filters and empty the Dust Collector. Check for blockages and unblock
Over-heating / Stopping	Clean the Filters, empty the Dust Collector, check for blockages and unblock then allow it to cool
Floor Brush hard to push	Due to the strong suction of your vacuum cleaner, it may be difficult to push, especially over thick carpet. Rather than force the Floor Brush, lift the Floor Brush momentarily to allow air to flow into the vacuum releasing the built up suction pressure, then continue vacuuming. Slide open the vacuum suction adjusting plate (Sliding Block) located on the hose handle grip. This will reduce suction to the floor head.