

AVITA

Popcorn Maker User Manual



Item No: 900363


IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Carefully read these instructions before using your appliance.
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
3. Children should be supervised to ensure that they do not play with the appliance.
4. **VERY IMPORTANT:** Do not immerse in water or other liquids or use near basins or sinks. Ensure that the appliance does not get wet (water splashes etc.) and do not use it with wet hands.
5. Do not use oil in the popping chamber.
6. Unplug from Mains outlet when appliance is not in use, in storage, before attaching or removing accessories, and before cleaning.
7. An appliance dropped or damaged should not be used until examined by a service engineer.
8. Do not permit the mains lead to come in contact with hot objects. Please ask a service engineer to replace a worn or damaged mains lead immediately with an approved lead of the same size and type.
9. Use this appliance only for its intended use. Use only genuine attachments supplied by an authorized Service-Dealer.
10. The appliance should not be used outdoors, placed near a hot gas or electrical burner or placed in a heated oven.
11. Do not operate underneath or near flammable materials, such as curtains or drapes or any other combustible material.
12. Do not let the cord hang over the table edge, or counter.
13. An appliance should never be left unattended when plugged in.
14. This appliance is intended for household use only and not for commercial or industrial use.
15. Always ensure that the popcorn maker has completely cooled down before storing.

16. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid to a hazard.
17. If appliance is to be used by a third party, please supply the instruction manual with it.
18. No liability can be accepted for any damage caused by non-compliance with these instructions or any other improper use or mishandling.

Features of Your Popcorn Maker

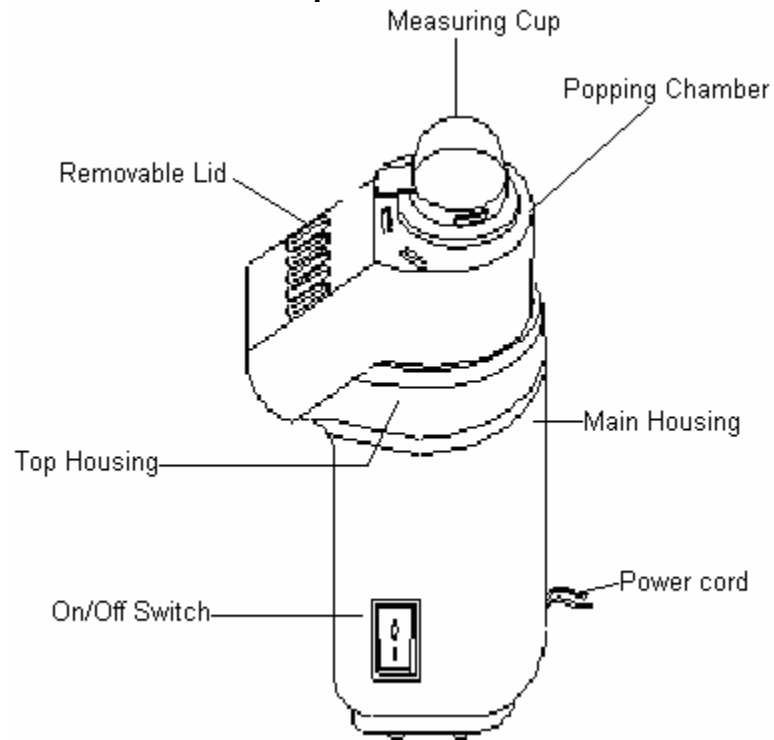

CAUTION:

Do not attempt to service this appliance yourself. Refer servicing to qualified service personnel.

INSTRUCTIONS FOR USE

- Carefully unpack the popcorn maker and remove all packaging materials before initial use.
- Clean and dry thoroughly the top cover before use.
- Fill the measuring cup with corn. 100g MAX capacity.
- Pour the corn into the popping chamber after removing the cover.
- Replace the cover and place a heat resistant bowl beneath the chute.
- Place the measuring cup back into its position in the cover.
- Plug in to mains supply.
- Switch the on switch to "I". The appliance will start operating.
- Never remove cup when popping is in progress.
- Corn will begin to pop and will flow out of the chute into the bowl.
- When the corn has stopped popping return the switch to position "O".
- The measuring cup may also be used to melt butter or margarine while the machine pops the corn. Do not allow any butter or margarine to enter into the popping chamber as it will damage the machine.
- **NOTE;** Before starting another portion of popcorn, remove any unpopped corn from the popping chamber.
- Fresh corn kernels give best results. Once the pack of corn kernels is opened, it should be stored in an airtight container in the fridge.

WARNING: ALLOW THE MACHINE TO COOL DOWN FOR AT LEAST 10 MINUTES BEFORE USING A SECOND TIME.

CLEANING INSTRUCTIONS

- To clean the outer surface of the popcorn maker, use a soft damp cloth and dry it afterwards with a dry towel. Do not use abrasive creams, steel wool or scouring pads. Clean only after unplugging the popcorn maker from the mains supply.
- Wipe the interior of the popcorn maker with a dry cloth, being careful not to allow any water into the popping chamber, as this will damage the machine.
- All removable parts on the popcorn maker should be detached and cleaned thoroughly in warm, soapy water at regular intervals