



# Garlic Peeler & Chopper

## User Manual



**Model No.: AD-833**

**Item No.: 900117**

**220-240V~ 50/60Hz 300W**

**Rev 1**

## **IMPORTANT SAFEGUARDS**

When using an electrical appliance, basic precautions should always be followed, including the following:

### **READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE**

- This appliance is for domestic use only. Commercial use voids warranty. Use as described in this instruction booklet.
- To protect against electric shock, do not immerse the motor, cord or plug, in water or other liquid. The bowl and attachments are removable and can be immersed in water.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not leave the unit unattended when plugged in.
- Unplug from power supply when not in use and before cleaning.
- Ensure the voltage indicated on the appliance corresponds to the local mains voltage before you connect the appliance.
- Never use any accessories or parts from other manufacturers or that have not been specifically made for this product. Your guarantee will become invalid if such accessories or parts have been used.
- Do not operate any appliance with a damaged cord or plug or if the appliance malfunctions or has been damaged in any way.
- If the mains cord of this appliance is damaged, it must always be replaced by a service centre authorised in order to avoid hazardous situations.
- To disconnect – remove the plug from the outlet. Do not pull plug out by the cord.
- Thoroughly clean the parts that will come into contact with food before you use the appliance for the first time.
- Do not exceed the quantities indicated in the Maximum Quantity and Operation Time table.
- It is not recommended to use this appliance with an extension cord or power board. Please ensure that the appliance is plugged directly into the electrical outlet.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or come in contact with hot surfaces.

- Do not place on or near a hot gas or electric burner or in a heated oven.
- Switch the appliance off before detaching or attaching any accessory.
- Never immerse the motor unit in water or any other fluid, nor rinse it under the tap. Use only a moist cloth to clean the motor unit.
- Remove the protective cover from the blade before use.
- The cutting edges of the blade and the inserts are very sharp. Avoid touching them.
- If the blade gets stuck, unplug the appliance before removing the ingredients that are blocking the blade.
- Let hot ingredients cool down before processing them (max. temperature 800/175°F).
- The mixing bowl is not suitable for microwave use.

**Note:** Maximum Operating Time prior to a 10 minute cool down period is 30 seconds.

## PERSONAL SAFETY

**CAUTION:** This product comes with accessories that are very sharp!! Take great care in handling accessories to avoid injury.

**To avoid Injury, Ensure you remove the cutting, mixing or chopping accessories, etc. from the bowl prior to tipping the ingredients out of the bowl.**


**To avoid injury, Never tip the bowl over with any of these cutting, mixing or chopping accessories etc. in the bowl.**

## TECHNICAL SPECIFICATION

Voltage:	230 - 240Va.c. 50Hz
Power:	300Watts (Max)
Capacity:	1 litre
Chopping Blade:	Stainless Steel
Peeling Balloon:	Silicon Rubber

## COMPONENTS

- 1 - "On" button
- 2 - Motor Unit
- 3 - Cord with plug
- 4 - Cover
- 5 - Silicon Balloon
- 6 - Chopping blade
- 7 - Bowl
- 8 - Shaft

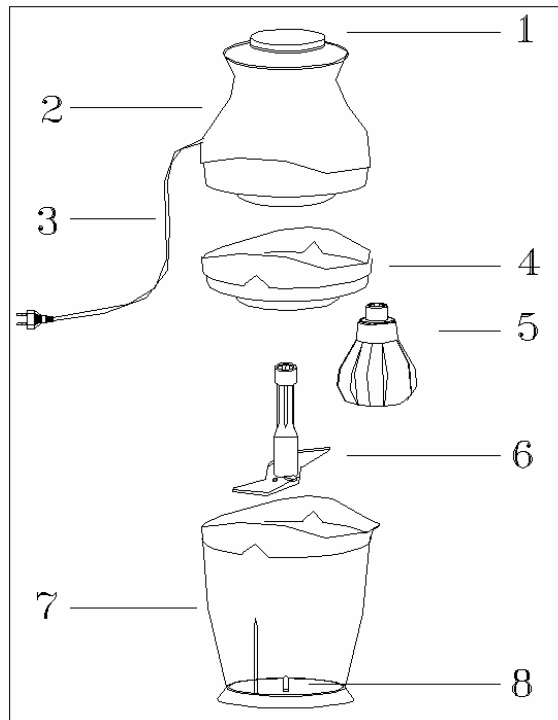

## MAXIMUM QUANTITY and OPERATION TIME TABLE

INGREDIENTS	MAX. QTY. (grams)	PROCESSING TIME (Seconds)	ATTACHMENT
Parsley	35	10	(7) Chopping blade
Onions	200	15	(7) Chopping blade
Garlic	150	10	(7) Chopping blade
Carrot	200	10	(7) Chopping blade
Raw Meat	200	15	(7) Chopping blade
Chocolate	200	10	(7) Chopping blade
Garlic	150	10	(5) Silicon Balloon
Peanut	35	10	(5) Silicon Balloon

**Note:** Do not use the blade to chop very hard ingredients like coffee beans, nutmeg or ice cubes, as this may blunt the blade.

## INSTRUCTIONS FOR USING THE GARLIC PEELER

1. Place the silicon balloon onto the shaft inside the bowl. See Fig. B

2. Separate garlic cloves and place unpeeled into the bowl, see Fig. C (Do not exceed the quantities indicated in the Maximum Quantity and Operation Time table).

3. Place the cover onto the bowl, see Fig. D.

4. Place the motor unit on the bowl, see Fig. E. Note: The motor unit will only fit in one position.

5. Press down the "ON" button to start, see Fig. F.


6. Continue until garlic is peeled and peelings are loose in the bowl. You may need to shake cloves and repeat until all are peeled. DO NOT exceed the operating time.

7. When finished, turn off at the switch and unplug the unit.

8. Remove the cover and separate the peeled cloves and peelings

9. Remove the silicone balloon and insert the chopping blade. See Fig A.

10. Return the peeled garlic cloves to the bowl and follow steps 4 and 5.

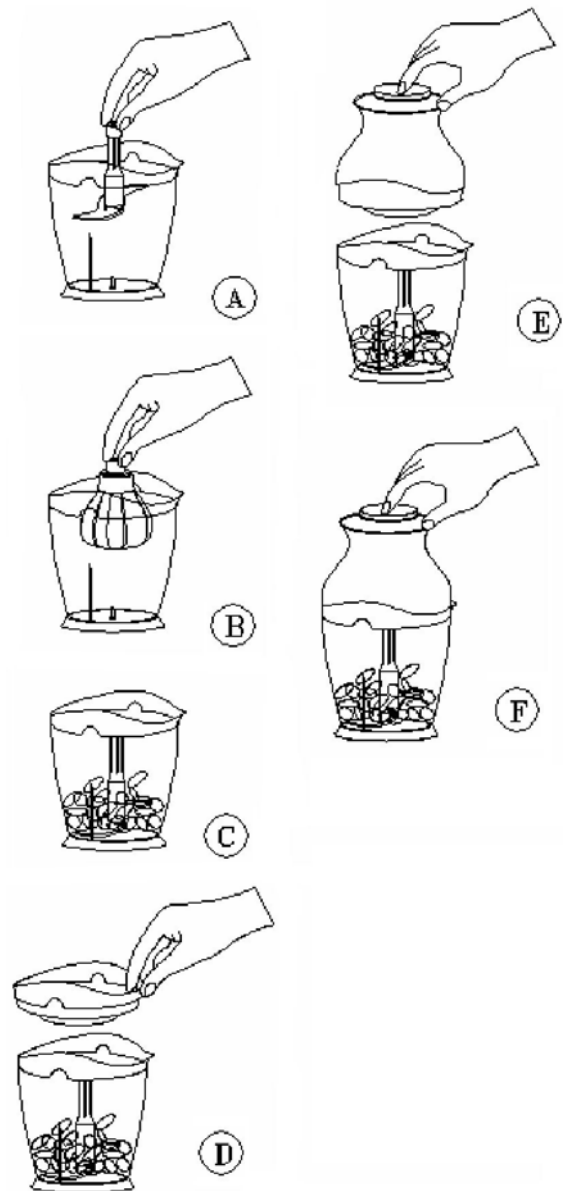

## CLEANING

The bowl, cover and attachments can be washed in the dishwasher.

- First remove the plug from the socket.
- The motor unit must not be immersed in water or placed in a dishwasher.
- Clean the appliance with a moist sponge.
- The blade can be cleaned under running water.

# **GUARANTEE**

## **WHAT'S COVERED**

H. E. Group Pty Ltd guarantees the Bravetti Garlic Peeler for a full replacement for a period of 12 months from the date of purchase, which is only valid with the presentation of the original proof of purchase receipt. This guarantee covers materials and workmanship defects only.

## **WHAT IS NOT COVERED**

This guarantee does not apply to defects arising from abuse, alteration or unreasonable use of the product. In addition, it does not cover general deterioration due to usage.

This guarantee does not apply to the accessories and due to general deterioration.

## **WHAT H. E. GROUP PTY LTD WILL DO**

H. E. Group Pty Ltd will replace the product, if a defect is discovered whilst under the guaranteed period, subject to verification of defect or malfunction, date and proof of purchase.

## **CUSTOMER CARE**

*All enquiries may be directed to our friendly customer service team on toll free number **1800 079 124** or via email [info@hegroup.com.au](mailto:info@hegroup.com.au)*