



2 Slice Twin Slot Toaster USER MANUAL




MODEL NO: 900073

IMPORTANT SAFEGUARDS

When using the electrical appliances, basic safety precautions should always be followed, including the following:

- Read this instruction booklet carefully before operation.
- Before using the appliance, check that the mains power voltage corresponds with the voltage shown on the rating plate.
- Do not touch hot surfaces – Use handles or knobs.
- The appliance should be connected to a correctly earthed power socket.
- Always remove the plug from the power socket when the appliance is not in use and before carrying out any maintenance operations.
- Never leave the appliance unattended when it is switched on.
- The appliance is not intended for use by young children or infirm persons without supervision.
- Young children should be supervised to ensure that they do not play with the appliance.
- Bread may burn, therefore toasters must not be used near or below curtains and other combustible materials.
- This appliance is for domestic use only. Commercial use voids warranty. Use as described in this instruction booklet.
- Do not switch the appliance on if it appears to be faulty in any way.
- To protect against electric shock, do not immerse cords, plugs or the appliances in water or any other liquid.
- Do not let the power cord hang over the edge of a table or counter or let it come into contact with any hot surfaces.
- Unplug from outlet when not in use or before cleaning.
- Do not use this product for anything other than its intended use.
- To disconnect – remove the plug from the outlet. Do not pull plug out by the cord.
- Before switching on, ensure the slices of bread do not get jammed in the toaster slots. However, if this happens unplug the appliance first and then take out the jammed bread slice.
- The housing of the toaster will become very hot during use especially in the area of the toaster slots. Please be careful to avoid being burned. Please only use the control knob, lever and button for operation.
- Do not insert fingers or metal objects like knives or forks into the bread slots.
- The housing of the toaster will become very hot during use especially in the area of the toaster slots. Please be careful to avoid being burned. Please only use the control knob, lever and button for operation.
- For repairs or accessories contact the distributor on the contact details outlined in the guarantee.

General Description

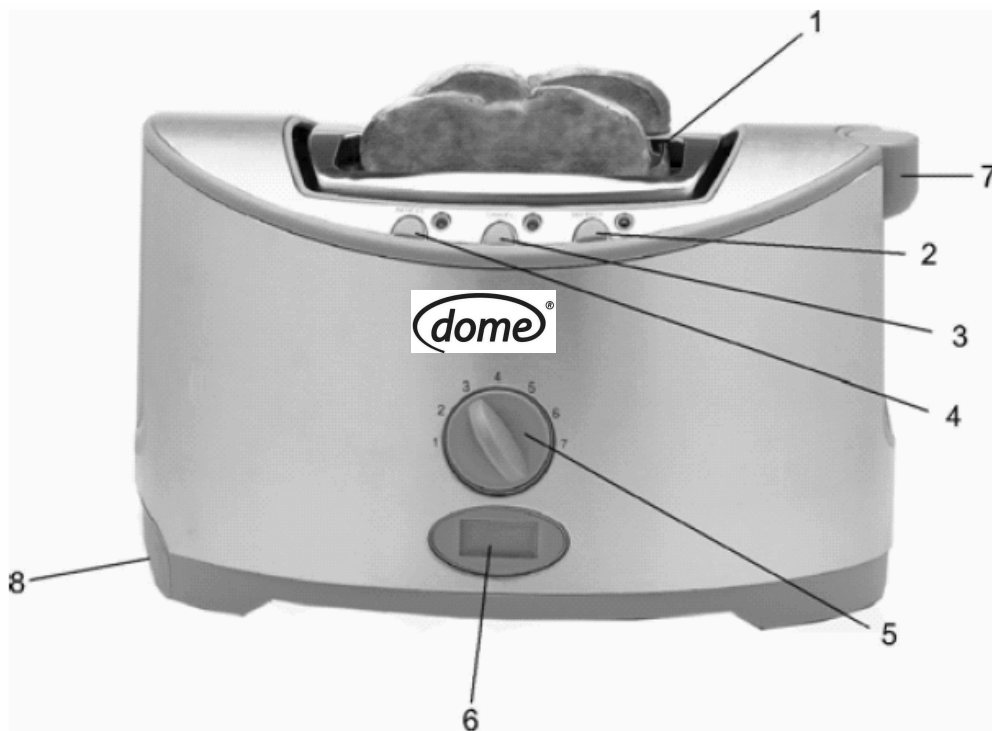

- 1 – Toasting slots
- 2 – Crumpet button
- 3 – Stop/Cancel button
- 4 – Reheat Button
- 5 – Variable browning control
- 6 – Electronic countdown display
- 7 – Bread release lever
- 8 – Slide out crumb tray

How To Use The Toaster

Selecting Browning Level

| Grades | Bread Type |
|--------|---------------|
| 1-3 | Thin bread |
| 3-5 | General bread |
| 5-7 | Frozen bread |

1. Ensure lever is in the up position before plugging toaster into wall outlet.
2. Select the desired level of browning on the browning control. This will vary according to the moisture content and thickness of the bread; old bread toasts quicker than fresh.
3. After selecting the desired level, place bread in slots and press the lever downwards until it locks. When toasting only one slice, set the browning control to a low setting – either slot can be used.
4. The electronic countdown timer will illuminate and the time will countdown.
5. Once the timer reaches zero the desired browning level has been reached, you will hear an acoustic sound and the bread will pop up automatically. The bread carriage will have returned to its up position and have disconnected the element, it is now ready for the next toasting.
6. If the toast jams in the slots, the toaster **must** be unplugged and the bread removed **only** when the toaster has cooled down. Do not use any metal implements.
7. **Cancel Button:** if you wish to cancel the toasting cycle at any stage during its operation, depress the cancel button.
8. **Reheat Feature:** if you wish to reheat toast which has previously been cooked, place the toast in the slots and depress the lever downwards until it locks, then press the Reheat Button. The reheat indicator will illuminate to confirm activation of reheat function. Note: The reheat time is independent of browning control setting.
9. **Crumpet Feature:** To heat crumpets, place the crumpet with the bottom part facing the middle of the toaster and depress lever downwards until it locks, then press Crumpet button. The Crumpet indicator will illuminate to confirm activation of function.
10. Ensure lever is in up position before disconnecting from the mains.

Cleaning

- Before cleaning, switch off and unplug the appliance and let it cool down.
- Remove the crumbs from the browning slots then slide out the crumb tray, clean it and place back into the appliance.

Outside cleaning:

Clean the outside of the appliance gently with a damp and soft cloth, and then wipe it with a dry cloth. Never use steel wire, abrasive cloth or other caustic agents, as they will damage the finish of the appliance.