



## Stick Mixer User Manual



**Model No. HM-930C-2**  
**Item No. 900179**  
**230-240Va.c. 50/60Hz**  
**250W**  
**Rev 1**

**SAVE THESE INSTRUCTIONS**

## IMPORTANT SAFETY INSTRUCTIONS

**WARNING** Before using your DOME STICK MIXER please read all instructions.


- Check if the rated voltage of the appliance is compatible with the local power system. Confirm if all the attachments are included in the package, otherwise contact the responsible vendor.
- Children should be supervised to ensure that they do not play with the appliance
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Use this appliance only for its intended uses as described in manual. Do not use corrosive chemicals or vapours with this appliance
- Unplug from electrical outlet when not in use, or before assembling, disassembling or cleaning. To unplug, grasp the plug and pull from power outlet. Never pull cord.
- To avoid risk of electrical shock, do not put the motor in water or any other liquid.
- Never carry the appliance by the cord.
- Avoid contacting moving parts.
- Switch off the appliance before changing accessories or approaching parts which move in use
- The use of attachments not recommended or sold by the manufacturer may cause electric shock or injury.
- Do not operate the appliance with a damaged cord or plug. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Do not operate any appliance if the appliance malfunctions, is dropped or damaged in any manner. Return appliance to the nearest authorised service agent or similarly qualified person for a thorough examination, repair, electrical or mechanical adjustment.
- Do not reach for an appliance that has fallen into water. Switch '**OFF**' at the power point and unplug immediately.
- Do not use this appliance outdoors.

- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not operate or place any part of this appliance on or near any hot surfaces, such as a gas or electric burner, or in a heated oven.
- Do not use an appliance for other than its intended use.
- Do not attempt to repair or disassemble the appliance. There are no user serviceable parts.
- This product has not been designed for any uses other than those specified in this booklet.
- The appliance should not operate for more than 15 Seconds continuously. After each cycle of operation it should rest for at least 4 minutes.
- Never touch the blades while the machine's plugged in.
- Keep fingers, hair, clothing and utensils away from moving parts.
- Never blend hot oil or fat.

## SPECIFICATIONS

Model No.	HM-930C-2
Item No.	900179
Rated Voltage	230 - 240Va.c. 50/60Hz
Rated Input Power	250W

# COMPONENTS LIST

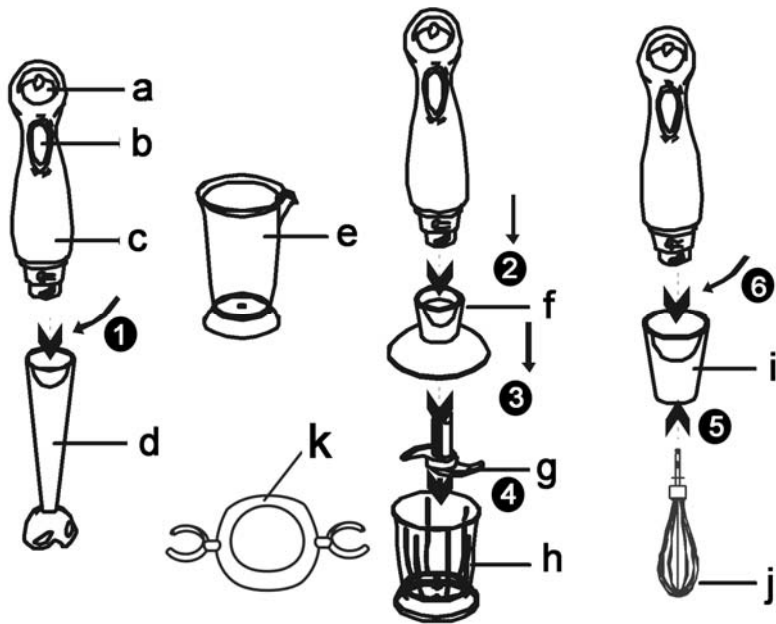

Hand Blender		Chopper		Whisk	
a	3 Speed switch	f	Chopper cover	i	Whisk collar
b	On/Off button	g	Chopper blade	j	Wire whisk
c	Power handle	h	Bowl	k	Wall mount Tool Tidy
d	Blender shaft				
e	Beaker				

**DO NOT TOUCH THE BLADES**

## BEFORE USING FOR THE FIRST TIME

- Remove all packaging and throw away the blade covers.

## SETTING THE SPEED

- When switching on the appliance with the On/Off Switch “b”, the processing speed corresponds to the setting of the 3 Speed switch “a”.
- The higher the speed setting, the faster the chopping results. Select the required speed setting first, then press the On/Off switch “b”.
- Depending on the application, we recommend the following speed settings:
  - As a Hand blender 1 ~ 2
  - As a Chopper 2 ~ 3
  - As a Whisk 2 ~ 3

## TO USE THE HAND BLENDER

- You can blend baby food, soups, sauces, milk shakes, mayonnaise etc.
- **Note:** Do Not use for more than 15 Seconds at a time. Allow to cool between uses.

## For Beaker Blending

- Do Not fill the beaker above 1000ml.

## For Saucepan Blending

1. Take the pan off the heat and let it cool slightly. Otherwise your hand blender could overheat.
2. Fit the power handle inside the blender shaft, turn and lock. **ⓘ**
3. Plug in. To avoid splashing, place the blade in the food before switching on.
4. Hold the power handle steady. Then press the button.
5. Do Not let liquid get above the join between the power handle and blender shaft.
6. Move the blade through the food and use a stabbing action.
7. If your blender gets blocked, unplug before clearing.
8. After use, unplug and dismantle prior to cleaning.

## To Use The Chopper

- Care is needed when handling the cutting blade, especially when removing the blade from the bowl, emptying the bowl and during cleaning, Do Not touch the sharp blades.
- Remove the chopper blade before emptying the bowl.
- Never remove the cover until the blade has completely stopped.
- You can chop meat, cheese, vegetables, herbs, bread, biscuits and nuts.
- Do Not chop hard foods such as coffee beans, ice cubes, spices or chocolate – you will damage the blade.
- **Note:** Do Not use for more than 15 Seconds at a time. Allow to cool between uses
  1. Remove any bones and cut food into 1-2cm cubes.
  2. Fit the chopper blade over the pin in the bowl. ❹
  3. Add your food
  4. Fit the chopper cover, turn and lock. ❸
  5. Fit the power handle, turn and lock. ❷
  6. Plug in, hold the bowl steady, and then press on/off button.
  7. After use, unplug and dismantle prior to cleaning.

## Processing Guide

FOOD TYPE	MAXIMUM AMOUNT	APPROXIMATE TIME
Meat	300g	10-15 Seconds
Herbs	80g	15 Seconds
Nuts	250g	15 Seconds
Cheese	250g	15 Seconds
Bread	1 slice	15 Seconds
Hardboiled eggs	6	5 Seconds
Onions	300g	10 Seconds

## To Use The Whisk

- **Note:** Do Not use for more than 15 Seconds at a time. Allow to cool between uses
- You can whip light ingredients such as egg whites; cream; instant desserts; and eggs and sugar for whisked sponges.
- Do Not whisk heavier mixtures such as margarine and sugar - you will damage the whisk.
- Do Not whisk more than 8 egg whites or 1000ml cream at a time.
- Do Not let liquid get above the whisk wires.
  1. Push the wire whisk into the whisk collar. ⑤
  2. Fit the power handle inside the whisk collar, turn and lock. ⑥
  3. Place your food in a bowl.
  4. Plug in, hold the bowl steady, and then press on/off button.
  5. After use, unplug and dismantle prior to cleaning.

## STORAGE

Attach the tool tidy onto the wall and store the components as shown



## **CLEANING**

- Always switch off and unplug before cleaning.
- Do Not touch the sharp blades.
- Take special care when preparing food for babies, the elderly and infirm.
- Always ensure that the hand blender shaft is thoroughly sterilized. Use a sterilizing solution in accordance with the sterilizing solution manufacturers instructions.
- Some foods such as eggs and carrot may discolour the plastic. Rubbing with a cloth dipped in vegetable oil helps remove discolouring.

### **Power Handle, Chopper Cover, Whisk Collar**

- Wipe with a damp cloth, and then dry.
- Never immerse in water or use abrasives.

### **Blender Shaft**

- Part-fill the beaker with warm, soapy water. Then insert the blender shaft and switch on.
- Unplug, and then dry.

### **Blender Shaft, Chopper Blade, Whisk, Beaker, Bowl**

- Wash up, and then dry.

**NEVER IMMERSER THE MAIN BODY IN WATER OR WASH UNDER A TAP.**

### **Do Not Wash in a Dishwasher**

Cleaning the parts immediately after use ensures a faster clean up time, and this will prolong the life of your appliance & accessories and reduce staining on the plastic parts.

The use of harsh abrasives is not recommended, simply clean the parts as described.

# **GUARANTEE**

## **WHAT'S COVERED**

**H. E. Group Ltd** guarantees the **Dome Appliance** for a full replacement for a period of 12 months from the date of purchase, which is only valid with the presentation of the original proof of purchase receipt. This guarantee covers materials and workmanship defects only.

## **WHAT IS NOT COVERED**

This guarantee does not apply to defects arising from abuse, alteration or unreasonable use of the product. In addition, it does not cover general deterioration due to usage.

## **WHAT H. E. GROUP LTD WILL DO**

**H. E. Group Ltd** will replace the product, if a defect is discovered whilst under the guaranteed period, subject to verification of defect or malfunction, date and proof of purchase.

## **CUSTOMER CARE**

**All enquiries may be directed to our toll free customer service number:**

**1800 079 124** or via email [\*\*info@hegroup.com.au\*\*](mailto:info@hegroup.com.au)