

# Homemaker *lifestyle*™



## KETTLE

### Models:

- 900600 – Pink
- 900602 – Blue
- 900604 – Green
- 900606 – Beige
- 900611- Brown

## **IMPORTANT**

**CAUTION:** This kettle should be used with a residual current device (safety switch) to lessen the risk of scalding or other injury from hot water that may be ejected if the heating element ruptures.


 
Disregard this marking if your home is fitted with a residual current device (safety switch).

**CAUTION:** Do not operate the kettle on an inclined surface. Do not move the kettle while it is switched on.

- Read this instruction booklet carefully before operation.
- Before using the appliance, check that the mains power voltage corresponds with the voltage shown on the rating plate.
- The appliance should be connected to a correctly earthed power socket.
- Always remove the plug from the power socket when the appliance is not in use and before carrying out any maintenance operations.
- Never leave the appliance unattended when it is switched on.
- The appliance is not intended for use by young children or infirm persons without supervision.
- Young children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the place of purchase in order to avoid a hazard.
- This appliance is for domestic use only. Commercial use voids warranty. Use as described in this instruction booklet.
- Do not switch the appliance on if it appears to be faulty in any way.
- Do not immerse the kettle in water or any other liquid
- To clean the outside wipe the kettle with a damp cloth
- To clean the inside, fill the kettle with edible vinegar and leave overnight. Empty and rinse thoroughly.
- Never unplug the unit by pulling the cord. To unplug, grasp the plug.
- Do not operate the kettle unless the element is fully immersed.
- Always ensure the kettle has water in it prior to boiling.


## OPERATION

1. Push the latch to open the lid and fill water to the desired level. During filling of water ensure the water level is not below "Min" mark or above the "Max" mark. NOTE: The unit has dry heating protection and automatically cuts off the power in the case where there is not water in the kettle.

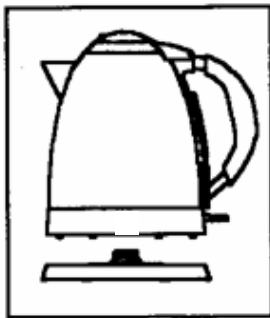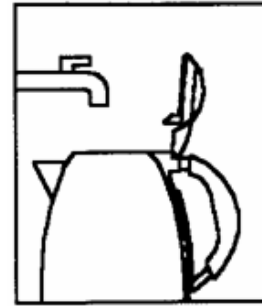

2. Close the lid and place the kettle body onto the base ready for heating.

 3. Plug the power cord into the power socket. Push the power switch under the handle to position "1", to begin heating. The LED signals its operation.

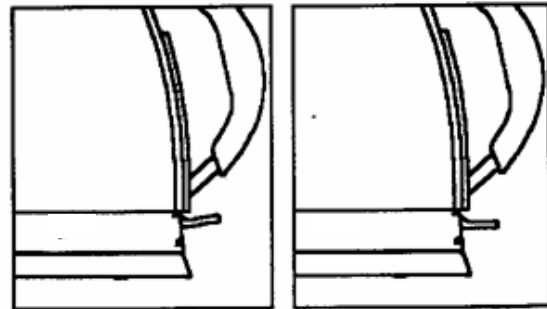

4. When the water in the kettle is boiling, the power switch will automatically reset to position "0" to cut off the power.

## Cleaning

- It is extremely important to remember that cleaning the kettle can only be performed when the plug has been removed from the supply.
- Never immerse any part of the kettle especially the cable and base plate in water.
- Cleaning should be performed when the kettle has already cooled down.
- Always ensure the electrical connections of the kettle remain absolutely dry.
- Clean the kettle with damp cloth. Do not use cleaning products which can cause health hazard or discoloration of the kettle.
- Ensure the outside and the electrical connection parts of the kettle completely dry before using.

**ONLY FILL THE KETTLE WITH WATER AND NEVER BOIL ANY OTHER LIQUID IN THE KETTLE.**

**Please Note:**

Depending on the harshness of your water, after some usage, calcification residue (scale) may appear on the heating element of the kettle. This is not rust.

**For cleaning stubborn scale, please take care of the following instruction:**

1. Fill 300mL "White Vinegar" into the kettle with 0.5L water.
2. Boil the kettle and let it cool normally (don't add any water to dilute), run this cycle three time a day and let sit overnight.
3. Keep this cycle for a week, the scale should disappear and the heating surface plate will look like new.

## **GUARANTEE**

### **WHAT'S COVERED**

**H.E. Group Pty Ltd** guarantees this Homemaker Lifestyle Kettle for a full replacement for a period of 12 months from the date of purchase, which is only valid with the presentation of the original proof of purchase receipt. This guarantee covers materials and workmanship defects only.

### **WHAT IS NOT COVERED**

This guarantee does not apply to defects arising from abuse, alteration or unreasonable use of the product. It also does not cover general deterioration due to usage.

This guarantee does not apply to the **accessories** due to general deterioration.

### **CUSTOMER CARE**

All queries may be directed to our friendly customer service team on free call **1800 660 655** or via email [info@hegroup.com.au](mailto:info@hegroup.com.au)