

Homemaker
lifestyle™

Table Top Water Filter with Chiller




ITEM NO: 900610

KEYCODE: 39859723

IMPORTANT


- Read this instruction booklet carefully before operation.
- Before using the appliance, check that the mains power voltage corresponds with the voltage shown on the rating plate.
- Always remove the plug from the power socket when the appliance is not in use and before carrying out any maintenance operations.
- Do not immerse cooler in water for cleaning;
- The appliance is not intended for use by young children or infirm persons without supervision.
- This appliance is not a toy must not be used by children.
- Do not leave cord hanging over the edge of table top or touch hot surfaces.
- Do not place on or near hot stove or oven.
- This appliance is for domestic use only. Commercial use voids warranty.
- Do not unplug by pulling the power cord. Always hold the plug and pull from power socket.
- Use as described in this instruction booklet.
- Do not switch the appliance on if it appears to be faulty in any way.
- For repairs or accessories contact the distributor on the contact details outlined in the guarantee.
- Return to supplier for cord replacement or service

DESCRIPTION

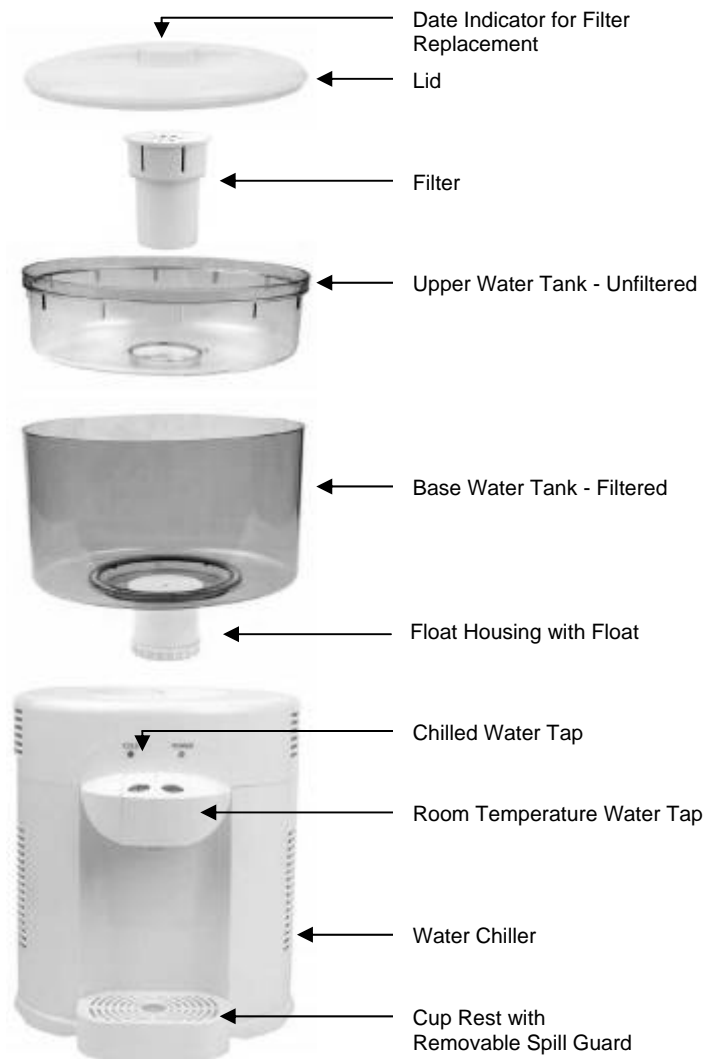

OPERATION

1. Wash and rinse out the plastic water tanks thoroughly before use.
2. Soak the filter in cold water for 30 minutes.
3. Ensure the rubber stopper is inserted as shown in FIG. A and FIG. B before placing base water tank onto the chiller.
4. Place base and upper water tank onto the chiller.
5. Insert filter and fill upper container with water

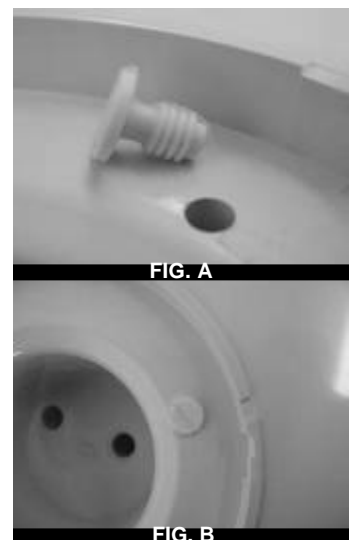

6. Turn the dial on the lid to current month. The change date will show the second successive month from the start date.
7. Place the lid on the upper tank to cover water.
8. It is recommended that you empty and discard the water through the taps from the first fill.
9. Insert the plug into a power socket and switch the water chiller to "ON" at the back of the unit to operate the cooling function.
10. Refill upper water tank and the water filter and chiller is ready for use.



Date Indicator for Filter Replacement



ON / OFF Switch

FLOAT

The float is an important part of the Water Chiller. It is used to gauge the water levels and prevent any leakages.

To ensure the float is fitted correctly: -

1. Unscrew the bottom of the float housing to expose the float.
2. The float has a rubber stopper on the tip. This rubber tip must be pointing up towards the base water container.
3. Tightly screw the ring back on the housing.



Float Housing



Float with rubber stopper

MAINTENANCE

When changing the filter it is also recommended to wash the water tanks.

1. Remove both upper and base water tanks and wash in soapy water. Rinse thoroughly and dry before replacing.
2. The filter will require changing every 2-3 months. Filters can be purchased through stores or by contacting the distributor.