

Homemaker *lifestyle*™

INSTRUCTION MANUAL **For Homemaker Stainless Steel Kettle**



Items:

- 900600 – Pink
- 900602 – Blue
- 900604 – Green
- 900606 – Beige

IMPORTANT

CAUTION: This kettle should be used with a residual current device (safety switch) to lessen the risk of scalding or other injury from hot water that may be ejected if the heating element ruptures.


Disregard this marking if your home is fitted with a residual current device (safety switch).

CAUTION: Do not operate the kettle on an inclined surface. Do not move the kettle while it is switched on.

- Read this instruction booklet carefully before operation.
- Before using the appliance, check that the mains power voltage corresponds with the voltage shown on the rating plate.
- The appliance should be connected to a correctly earthed power socket.
- Use the kettle only with the base supplied.
- Always remove the plug from the power socket when the appliance is not in use and before carrying out any maintenance operations.
- Never leave the appliance unattended when it is switched on.
- The appliance is not intended for use by young children or infirm persons without supervision.
- Young children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the place of purchase in order to avoid a hazard.
- This appliance is for domestic use only. Commercial use voids warranty. Use as described in this instruction booklet.
- Do not switch the appliance on if it appears to be faulty in any way.
- Do not immerse the kettle in water or any other liquid
- To clean the outside wipe the kettle with a damp cloth
- To clean the inside, fill the kettle with edible vinegar and leave overnight. Empty and rinse thoroughly.
- Never unplug the unit by pulling the cord. To unplug, grasp the plug.
- Do not operate the kettle unless the element is fully immersed.
- Always ensure the kettle has water in it prior to boiling.


OPERATION

1. Lift off the lid and fill with water to the desired level. During filling of water ensure the water level is not below "Min" mark or above the "Max" mark. NOTE: The unit has dry boil protection and automatically cuts off the power in the event that there is no water in the kettle.

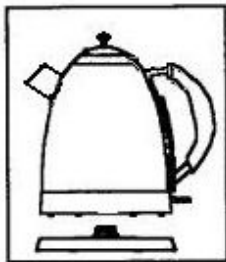

2. Close the lid and place the kettle body onto the base ready for heating.

3. Plug the power cord into the power socket. Push the power switch under the handle to position "1", to begin heating. The LED signals its operation.

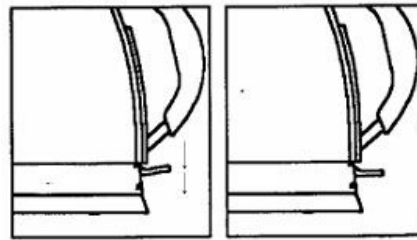

4. When the water in the kettle is boiling, the power switch will automatically reset to position "0" to cut off the power.

Cleaning

- It is extremely important to remember that cleaning the kettle can only be performed when the plug has been removed from the supply.
- Never immerse any part of the kettle especially the cable and base plate in water.
- Cleaning should be performed when the kettle has already cooled down.
- Always ensure the electrical connections of the kettle remain absolutely dry.
- Clean the kettle with damp cloth. Do not use cleaning products which can cause health hazard or discoloration of the kettle.
- Ensure the outside and the electrical connection parts of the kettle completely dry before using.

FILTER

Your kettle is supplied with a FILTER, please take note of the following points:

ENSURE it is inserted inside THE FRONT OF THE BODY BEHIND THE SPOUT. There are three metal fixings, which allow you to remove or replace the filter by clicking into place. The kettle must always be used with the Filter.

ENSURE that you descale your Filter at regular intervals in order not to impair the pouring performance of your kettle.

WARNING

NEVER leave the Filter loose in the kettle. It must be placed within the spout flush with the kettle body.

NEVER remove the Filter when the kettle contains hot water.

CLEANING

WARNING: always disconnect the kettle from the mains when cleaning the kettle and or the Filter.

The Filter is designed to stop large pieces of harmless lime scale from entering your drink.

Remove the Filter and do any of the following

- a) Place under a tap and brush using a nylon brush.
- b) Soak in a proprietary descaling agent and brush gently then rinse.

To remove Filter

Place thumb into spout, and press the filter from the fixings. It will flop into the body. **WARNING:** - ENSURE THE KETTLE IS COLD, no water inside and the plug is removed from the wall power socket at all times.

ONLY FILL THE KETTLE WITH WATER AND NEVER BOIL ANY OTHER LIQUID IN THE KETTLE.

Please Note:

Depending on the harshness of your water, after some usage, calcification residue (scale) may appear on the heating element of the kettle. This is not rust.

For cleaning stubborn scale, please take care of the following instruction:

1. Fill 300mL "White Vinegar" into the kettle with 0.5L water.
2. Boil the kettle and let it cool normally (don't add any water to dilute), run this cycle three time a day and let sit overnight if necessary.
3. Fill with water and boil, empty and repeat before using again.

GUARANTEE

WHAT'S COVERED

H.E. Group Pty Ltd guarantees this Homemaker Lifestyle Kettle for a full replacement for a period of 12 months from the date of purchase, which is only valid with the presentation of the original proof of purchase receipt. This guarantee covers materials and workmanship defects only.

WHAT IS NOT COVERED

This guarantee does not apply to defects arising from abuse, alteration or unreasonable use of the product. It also does not cover general deterioration due to usage.

This guarantee does not apply to the **accessories** due to general deterioration.

CUSTOMER CARE

All queries may be directed to our friendly customer service team on free call

1800 079 124 or via email **info@hegroup.com.au**