

Homemaker

Portable Beverage Party Cooler (Fridge) USER MANUAL



ITEM NO.: 900261

MODEL NO: SPC-45

IMPORTANT SAFEGUARDS

When using an electrical appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING THIS PARTY COOLER

- Do not use if supply cord is damaged. If damaged, it must be replaced by the manufacturer or a similarly qualified person in order to avoid hazard.
- This party cooler is not intended for use by young children or infirm persons, without supervision. Young children must be supervised to ensure they do not play with the appliance.
- Ensure the cooler is unplugged before cleaning or if the cooler is not in use.
- To clean the cooler use only mild detergents or glass cleaning products. Never use harsh detergents or solvents.
- It is not recommended to use this party cooler with an extension cord or power board. Please ensure that the appliance is plugged directly into the electrical outlet.
- When positioning the party cooler, ensure that there is at least a 5cm clearance at the sides and a 10cm clearance at the back of the cooler as this is the main outlet for heat. This will allow for adequate ventilation.
- This cooler is designed to store beverage, however, if placing food inside, ensure that there is sufficient airflow between items.
- Do not place hot food or drink into the party cooler before it cools down to room temperature.
- Close the cooler party immediately after putting in any items so the inside temperature will not rise dramatically.
- Keep appliance away from any heat source or direct sunlight.
- Do not place any other appliance on top of the party cooler.
- The Party Cooler is an electrical appliance. To avoid injury or death from electrical shock do not operate the Party Cooler with wet hands, while standing on a wet surface or while standing in water.
- Do not use outdoors in wet conditions.
- When positioned or if moving the appliance ensure that it is not set horizontally or declined less than 45° or turned upside down.
- Never pull the cord to disconnect it from the outlet. Grasp the plug and pull it from the outlet.
- Never lift or carry the Party Cooler by the cord.
- Keep the cord away from heated surfaces.
- This Party Cooler is for household use only. Any other use will void the warranty.
- Do not plug into the power socket before set up is completed.
- An empty cooler can be a dangerous attraction to children. If disposing of the cooler remove gaskets, lids from your unused appliance, or take other action to ensure the cooler is harmless.
- **WARNING:** Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- **WARNING:** Do not use electrical appliances inside the storage compartments of this appliance, unless they are of the type recommended by the manufacturer.

The Homemaker Portable Party Beverage Cooler is actually a portable Fridge and is designed to complement any party where cold drinks are required. It comes with two plastic shelves and one metal basket that can hold any size drink bottle. The unit is portable so it is very easy to bring it close to the party area.

PARTS DESCRIPTION



IMPORTANT NOTE

- The appliance is designed to give the best cooling effect whilst the **SOLID LID** is covering the contents.
- It is recommended to use the **SOLID LID** when operating for long periods (over 2 hrs) as it will retain the cool temperatures and also reduce power consumption.
- The **TRANSPARENT LID** is ideal for use when operating for a short time (up to 2 hrs)

OPERATION

TEMPERATURE CONTROL

The temperature of the Party Cooler ranges between -2° ~ 15° C. To adjust the temperature, turn the Temperature Control dial to the desired setting.

There are 7 different temperature settings. It is recommended to set the dial on 7 for the coldest temperature when the cooler is full.

- 0 – Warmest Temperature (15°)**
- 7 – Coldest Temperature (-2°)**

1. Insert the plug into the power socket.
2. Allow the cooler to reach the set temperature by leaving the Party Cooler to operate empty for approx. one hour
3. Fill the Party Cooler with drinks. The contents will reach the desired temperature within 1-2 hours of operation.

TROUBLESHOOTING

Problem	Possible cause	<u>Solutions</u>
The Party Cooler does not work.	There is a power failure. A house fuse has blown.	Ensure the Party Cooler is plugged in and the power socket is turned on. Replace any blown fuse in your meter box.
Party Cooler is not reaching the desired temperature	The party cooler is placed too close to a heat source Insufficient ventilation The Lid is opened too frequently or for a long period of time Transparent lid has been used for long period of time	Keep the cooler away from sunshine or other heat sources Place the party cooler in good ventilation and keep any items away from the fans. Keep lid closed. Change to Solid lid
Frost forming in the Party Cooler	Too much humidity. The ambient temperature is too low	Unplug to defrost, plug again after the frost thaws.

GUARANTEE

WHAT'S COVERED

H. E. Group Ltd guarantees **HOMEMAKER Portable Beverage Party Cooler** for a full replacement for a period of 12 months from the date of purchase, which is only valid with the presentation of the original proof of purchase receipt. This guarantee covers materials and workmanship defects only.

WHAT IS NOT COVERED

This guarantee does not apply to defects arising from abuse, alteration or unreasonable use of the product. In addition, it does not cover general deterioration due to usage.

WHAT H. E. GROUP LTD WILL DO

H. E. Group Ltd will replace the product, if a defect is discovered whilst under the guaranteed period, subject to verification of defect or malfunction, date and proof of purchase.

CUSTOMER CARE

*All enquiries may be directed to our friendly customer service team on toll free number **1800 079 124** or via email info@hegroup.com.au*