

Homemaker *lifestyle*™

INSTRUCTION MANUAL For Homemaker Stainless Steel 2 Slot Toaster



Items:

- 900601 – Pink
- 900603 – Blue
- 900605 – Green
- 900607 – Beige


IMPORTANT SAFEGUARDS

When using the electrical appliances, basic safety precautions should always be followed, including the following:

- Read this instruction booklet carefully before operation.
- Before using the appliance, check that the mains power voltage corresponds with the voltage shown on the rating plate.
- Do not touch hot surfaces – Use handles or knobs.
- The appliance should be connected to a correctly earthed power socket.
- Always remove the plug from the power socket when the appliance is not in use and before carrying out any maintenance operations.
- Never leave the appliance unattended when it is switched on.
- The appliance is not intended for use by young children or infirm persons without supervision.
- Young children should be supervised to ensure that they do not play with the appliance.
- Bread may burn; therefore toasters must not be used near or below curtains and other combustible materials.
- This appliance is for domestic use only. Commercial use voids warranty. Use as described in this instruction booklet.
- Do not switch the appliance on if it appears to be faulty in any way.
- To protect against electric shock, do not immerse cords, plugs or the appliances in water or any other liquid.
- Do not let the power cord hang over the edge of a table or counter or let it come into contact with any hot surfaces.
- Unplug from outlet when not in use or before cleaning.
- Do not use this product for anything other than its intended use.
- To disconnect – remove the plug from the outlet. Do not pull plug out by the cord.
- Before switching on, ensure the slices of bread do not get jammed in the toaster slots. However, if this happens unplug the appliance first and then take out the jammed bread slice.
- The housing of the toaster will become very hot during use especially in the area of the toaster slots. Please be careful to avoid being burned. Please only use the control knob, lever and button for operation.
- Do not insert fingers or metal objects like knives or forks into the bread slots.
- For repairs or accessories contact the distributor on the contact details outlined in the guarantee.

PRODUCT DESCRIPTION

1. Self adjusting bread carriage with extra wide slots
2. Removable crumb tray
3. On/Off toasting lever
4. Variable browning control
5. Function buttons: -
 - CANCEL
 - CRUMPETS
 - REHEAT
 - DEFROST

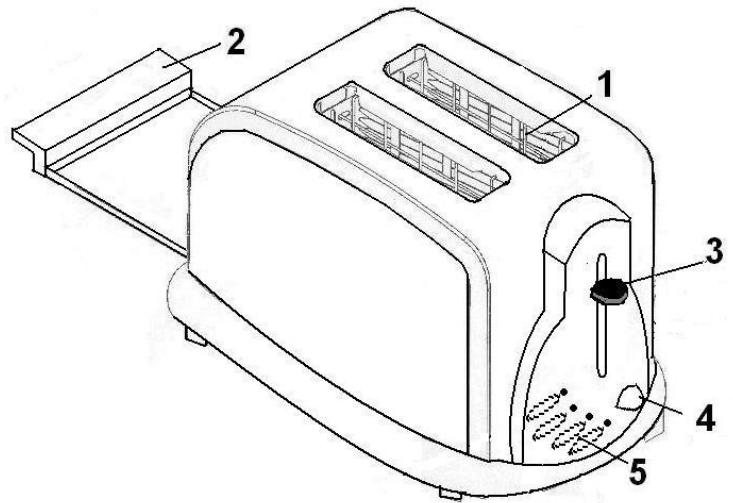

CAUTION

- Never force foods into toasting slots. Foods should fit freely between the guard wires.
- Do not toast “buttered” or other such treated breads.
- Uneven toasting is usually due to bread slices of uneven thickness

TOASTING

Selecting Browning Level

Grades	Bread Type
0-2	Thin bread
3-5	General bread
5-6	Frozen bread

1. The toaster has extra wide slots for toasting of thick bread slices.
2. For slightly dry bread use a lower “light/dark” setting than normal.
3. For fresh bread use a higher “light/dark” setting than normal.
4. Breads with uneven surfaces will require a higher “light/dark” setting.
5. Thickly cut pieces of bread (incl. crumpets) will take longer to toast. Very thick pieces may require two cycles.
6. When toasting raisin or fruit bread, remove any loose raisins from the surface.
7. Before toasting crumpets, slice each crumpet into two equal halves.
8. If you are toasting a single slice of bread, use a lower light/dark setting than normal.
9. If you are toasting frozen bread, waffles etc. use the defrost button.

Crumpet Button / Toasting from one side

Only one side of the bread is toasted as only outer coils will heat up.

1. Insert sliced crumpet or bread with the cut sides facing to the outside.
2. Press the toasting lever down until it locks in position.
3. Press the crumpet button (the LED will light up)
4. When the cycle is complete, the bread carriage will raise the crumpet/bread up. If you wish to stop the toasting before it is finished, simply press the STOP button.

Reheat Button

Reheats bread, crumpets or buns without browning.

1. Insert slices of bread into the toast slots.
2. Press the bread carriage lever down until it locks in position.
3. Press the reheat button (the LED will light up)
4. When the cycle is complete, the bread carriage will raise the crumpet/bread up. If you wish to stop the toasting before it is finished, simply press the STOP button.

Defrost button

The defrost button is designed to first defrost and then toast the bread, which extends the toasting cycle slightly.

1. Insert bread slices.
2. Turn the light/dark selector to desired position:
 - 0-2:** refrigerated bread and thinner frozen bread slices
 - 3-4:** Frozen waffles, refrigerated crumpets etc.
 - 5-6:** thicker frozen bread slices, crumpets,
3. Press the bread carriage lever down until it locks in position.
4. Press the defrost button (the LED will light up)
5. When the cycle is complete, the bread carriage will raise the crumpet/bread up. If you wish to stop the toasting before it is finished, simply press the STOP button

Cleaning and maintenance

1. Before cleaning unplug the machine and let it cool down.
2. Slide the crumb tray to clean crumbs sitting on the base of the toaster.
3. To remove any excess pieces of bread remaining in the toaster, turn the toaster upside down and shake it gently. Never use any sharp tools or cutlery to remove bread slices.
4. Do not use any sharp or scouring agents. Wipe the housing with a damp cloth and dry with a soft cloth. Use mild cleansers, and apply to cloth not directly on the housing.

GUARANTEE

WHAT'S COVERED

H.E. Group Pty Ltd guarantees this Homemaker Lifestyle Toaster for a full replacement for a period of 12 months from the date of purchase, which is only valid with the presentation of the original proof of purchase receipt. This guarantee covers materials and workmanship defects only.

WHAT IS NOT COVERED

This guarantee does not apply to defects arising from abuse, alteration or unreasonable use of the product. It also does not cover general deterioration due to usage.

This guarantee does not apply to the **accessories** due to general deterioration.

CUSTOMER CARE

All queries may be directed to our friendly customer service team on free call **1800 079 124** or via email **info@hegroup.com.au**