





# **PIRANHA ENVIRO Vacuum Cleaner USER MANUAL**

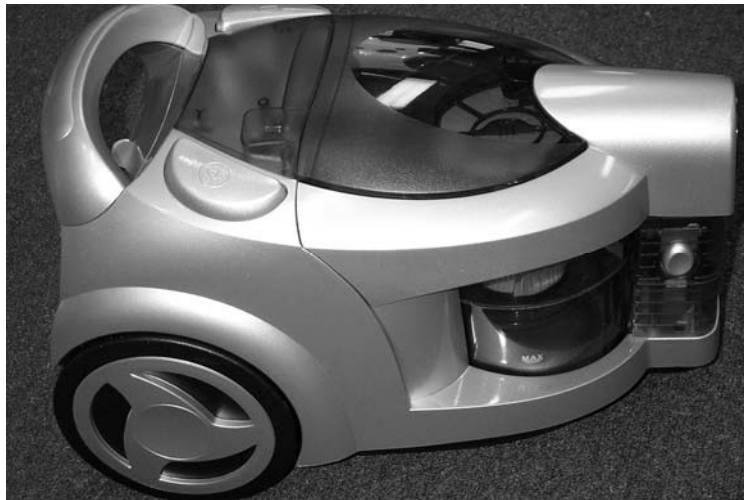

**MODEL NO: 900027**


## DESCRIPTION

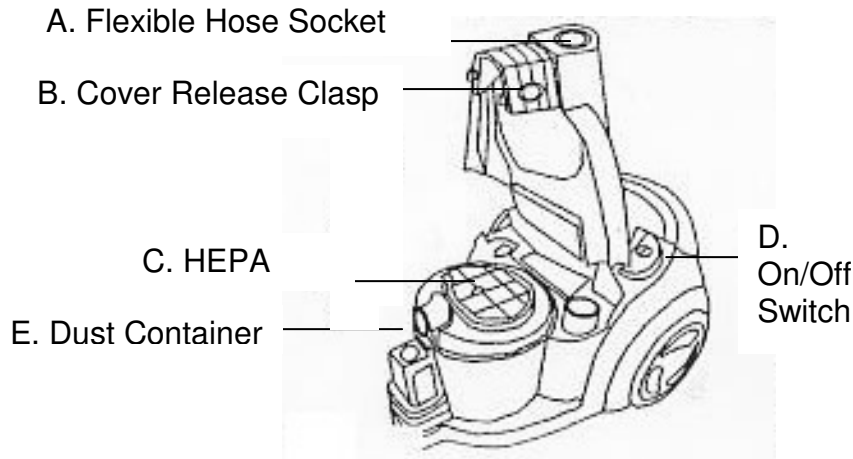


## IMPORTANT

- Read this instruction booklet carefully before operation.
- Before using the appliance, check that the mains power voltage corresponds with the voltage shown on the rating plate.
- The appliance should be connected to a correctly earthed power socket.
- Always remove the plug from the power socket when the appliance is not in use and before carrying out any maintenance operations.
- Always remove the plug from the power socket before opening the appliance.
- Do not use the appliance to vacuum liquids due to electric shock hazard.
- Never leave the appliance unattended when it is switched on.
- The appliance is not intended for use by young children or infirm persons without supervision.
- Young children should be supervised to ensure that they do not play with the appliance.
- This appliance is for domestic use only. Commercial use voids warranty. Use as described in this instruction booklet.
- Do not switch the appliance on if it appears to be faulty in any way.
- For repairs or accessories contact the distributor on the contact details outlined in the guarantee.


Do not remove the plug from the socket by pulling the cable or the appliance itself.

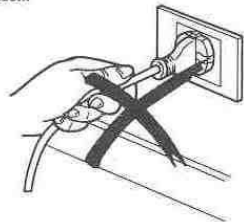


Do not run the appliance over the power cable.

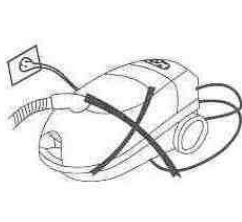

Do not use the appliance to vacuum lighted matches, cigarette ends or hot ash.

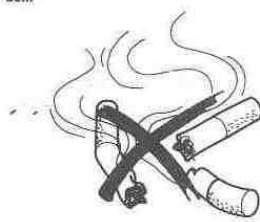

Do not use the appliance on wet surfaces.

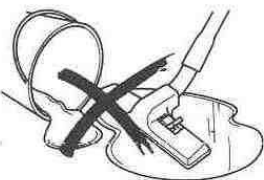

Do not obstruct the air intake or outlet vents.



Do not use the appliance to vacuum needles, drawing-pins or string.



## **PIRANHA ENVIRO MAXIMUM PARTICLE FILTRATION SYSTEM**


HEPA (High Efficiency Particulate Air) filters are an effective system in removing almost all indoor pollutants, dust mites, pollen and mould spores.

### **ASSEMBLING THE VACUUM CLEANER**

*Always remove the plug from the power socket before fitting or removing accessories*

#### **Fitting the Flexible Hose**

Insert the flexible hose into the hose socket on the front cover of the appliance. Press the flexible hose into the hose socket until the hose clicks into place.


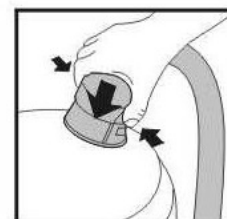


#### **Removing the Flexible Hose**

To remove the flexible hose, press the locking buttons on the base of either side of the flexible hose to release the lock. Pull the flexible hose out of the hose socket.

#### **Fitting the Telescopic Tubes / Plastic tubes (model dependent) and Accessories**

Attach the tubes to the curved handle of the flexible hose. To extend the telescopic tube (models C62086 & C62217) push on the button at the centre join and pull the inner tube outward.

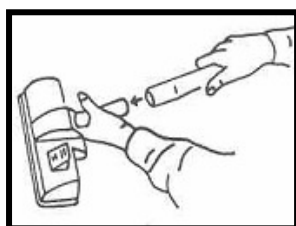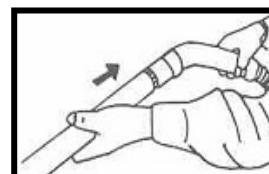


Attach the preferred cleaning accessory to the end of the tube.

#### **Removing the Tubes and Accessories**

To remove the plastic tubes and accessories, hold each piece tightly and pull firmly apart.

## **OPERATION METHOD**

1. Unwind the length of power cord required and insert the plug into the power socket. A YELLOW mark on the power cord indicates the ideal cable length. Do not extend the power cord beyond the RED mark.
2. Press the On/Off Switch Pedal to switch the appliance ON.
3. Adjust the Suction control knob on the curved handle to control the suction. The suction will be reduced with a larger air opening.

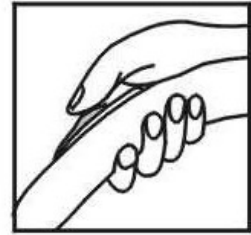


## **Retracting Cord**

To rewind cord press on cord rewinding pedal. CAUTION: Cord retracts very quickly. Take care to avoid injury.


## **Using the Cleaning Accessories**

- **Dual position carpet / floor brush**

Position 1: Bristles extended  
- For hard floors


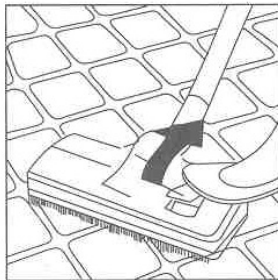


Position 2: Bristles retracted  
- For carpets

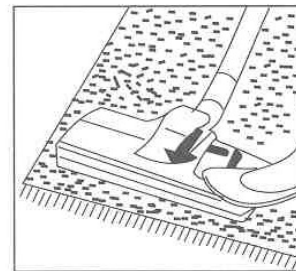

- **Integrated Brush and Nozzle**

For cleaning radiators, corners edges, drawers, curtains shelves, books, inlaid furniture, lamps and other delicate objects.

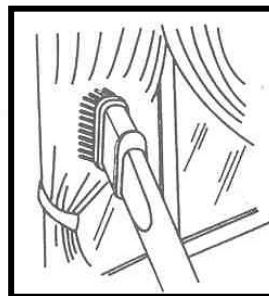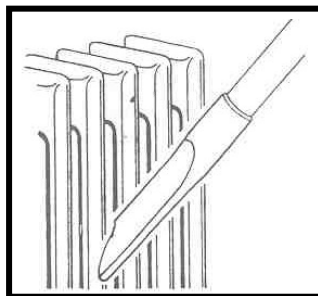

## **MAINTENANCE**

**NOTE:** Always remove the power plug from the wall outlet before carrying out any maintenance.

### **Cleaning the Dust Container**

1. Remove the flexible hose from the hose socket.
2. Open the front cover by pushing the two clasps and lifting the cover.
3. Slide the dust container out of the housing using the handle.
4. Hold container over a rubbish disposal bin then press button to open the base of the container and dispose of contents.
5. Close the container and replace in the housing. Close front cover ready for operation.

### **Maintaining Filters**

***It is very important to keep the filters clean to receive maximum performance from the vacuum. Not cleaning not replacing your filters regularly can reduce the suction power and cause overheating.***

1. To clean pre-motor filter, remove the filter from its housing located in the dust container cabinet.
2. Wash under running water and allow the filter to dry completely before replacing it in the vacuum.
3. To clean the HEPA filter, remove the filter from the dust container.
4. To clean the exhaust filter, detach the grille by pulling firmly away from the appliance.
5. Remove the filter and wash under running water and allow to dry completely before replacing it in the appliance.
6. Filters should be replaced approximately every few months depending on how frequently the appliance is used.
7. Filters can be purchased from the distributor.

