

REVVLON

**Limited 24-Month Warranty**

This appliance is warranted against defects in material or workmanship for 24 months from date of purchase by returning to the store where purchased. Any problems arising from misuse, attempts at repair, dropping or extreme wear are not covered by this warranty.

The store where this item was purchased is authorised to make an exchange only if the return is made within 30 days from purchase.

This warranty gives you specific legal rights, and you may also have other rights, which may vary depending on where you live.

PLEASE DIRECT ANY QUERIES TO OUR FRIENDLY  
CUSTOMER SERVICE TEAM ON FREE  
CALL: 1800 079 124

The trademark REVVLON is used under licence from  
Revlon Consumer Products Corporation

For more information on the Revlon range of appliances and for  
repairs out of warranty, please direct queries:

Made in China

Distributed by:  
H.E. Group Pty Ltd  
57 Waverley Road  
Malvern East, Vic.3145  
Free call 1 800 079 124  
[www.hegroup.com.au](http://www.hegroup.com.au)

For product information, visit us  
at [www.HelenofTroyUSA.com](http://www.HelenofTroyUSA.com)

 
© Revlon (RVI-418)

REVVLON<sup>®</sup>

25mm  
Ceramic  
Straightener



Model RV062AAV1 (900703)  
Important Safety Instructions



# Operating Instructions

## Use and Care Instruction Manual

This appliance is intended for household use only.



### Appliance Features:

- A – Handle
- B – Ceramic Heating plates
- C – “ON” / “OFF” switch
- D – “ON” indicator light

The appearance of your appliance may vary from the illustration above.

## SAVE THESE INSTRUCTIONS

Read all instructions before using.

### Important Safety Instructions

**WARNING:** Do not use this appliance near water contained in bath-tubs, basins or other vessels. This appliance is not intended for use by young children or infirm persons without supervision. Young children should be supervised to ensure that they do not play with the appliance.

**WARNING:** This appliance must not be taken into the bathroom. For additional protection, the installation of a residual current device (RCD with a rated operating current not exceeding 30mA is advisable in the electrical circuit. Ask your installer for advice.

Keep this appliance away from water. Never use appliance while bathing, in damp rooms, or over a hand basin or vessel filled with water. Neither should the appliance be used with wet hands nor immersed in water, held in running water, or allowed to become wet (e.g., as in splashing). Always unplug appliance when not in use. While using the hot appliance, do not let bare skin or eyes touch heated surfaces. Do not place heated appliance on any heat-sensitive surface when hot or when plugged in.

Note: Use on dry hair only. Do not use your straightener on synthetic hair wigs.

### Ceramic

Ceramic is professionally preferred for its high heat that preserves hair’s natural moisture for styles without “frizz.” The easy-to-clean plates emit high, constant heat to penetrate hair follicles quickly and retain natural moisture while minimising damage for soft, luxurious styles.

### Heating the Appliance

Plug the power supply cord into a main. To turn appliance on, push switch to “ON” position. The indicator light will glow red to indicate appliance is operating. Never leave this appliance on and unattended. To turn the appliance, push the switch to the “OFF” position and unplug the power supply cord from the main.

### Cleaning

Always unplug the appliance from its power source after each use and allow it to cool. To clean, wipe the straightener and plates with a damp cloth. Make certain the appliance is completely dry before using. Keep heated surfaces clean and free of dust, dirt, styling sprays and gels.

### Storage

When not in use “unplug it.”

Allow the appliance to cool and store it in a dry location. Never wrap the cord around the appliance, since this will cause the cord to wear prematurely and break. If the supply cord of this appliance becomes damaged, the appliance must be replaced by returning to the retailer from which the product was purchased or a similarly qualified person in order to avoid a hazard. Regularly check the main cord for wear and damage, particularly where it enters the appliance and the plug.

**WARNING:** If any malfunction occurs, do not attempt to repair it. This appliance has no user-serviceable parts.

### Styling

To straighten, separate a 5-cm section of hair, gently place the hair between the hot smoothing plates, and clamp down firmly on the handles. You will achieve the best results by working from the scalp to the ends of the hair. Leave in fine hair for 5 to 8 seconds and for 10 to 15 seconds in thick hair. Once hair is heated, slide the plates carefully down the isolated section, making sure the hair is heated and straightened all the way to the ends. (The ends will probably require less heat than the hair that grows closer to the scalp.) Hold ends of hair while smoothing the section. To remove hair, just release the pressure on the handles and allow the hair to gently slip out from the plates. Create a “flick” by using the rounded end of the plates to curl up or under at the end of hair.

