

REVLON

Limited 24-Month Warranty

This appliance is warranted against defects in material or workmanship for 24 months from date of purchase by returning to the store where purchased. Any problems arising from misuse, attempts at repair, dropping or extreme wear are not covered by this warranty.

The store where this item was purchased is authorised to make an exchange only if the return is made within 30 days from purchase.

This warranty gives you specific legal rights, and you may also have other rights, which may vary depending on where you live.

**PLEASE DIRECT ANY QUERIES TO OUR FRIENDLY
CUSTOMER SERVICE TEAM ON FREE
CALL: 1800 079 124**

The trademark REVLON is used under licence from
Revlon Consumer Products Corporation

For more information on the Revlon range of appliances and for
repairs out of warranty, please direct queries:

Made in China

Distributed in Australia by:
H.E. Group Pty Ltd
57 Waverley Road
Malvern East, Vic.3145
Free call 1 800 079 124
www.hegroup.com.au

For product information, visit us
at www.HelenofTroyUSA.com

© Revlon (RVI-419)

REVLON[®]

**38mm
Dual Edge
Ceramic
Straightener**




Model RV071AA (900054)
Important Safety Instructions

Operating Instructions

Use and Care Instruction Manual

This appliance is intended for household use only.

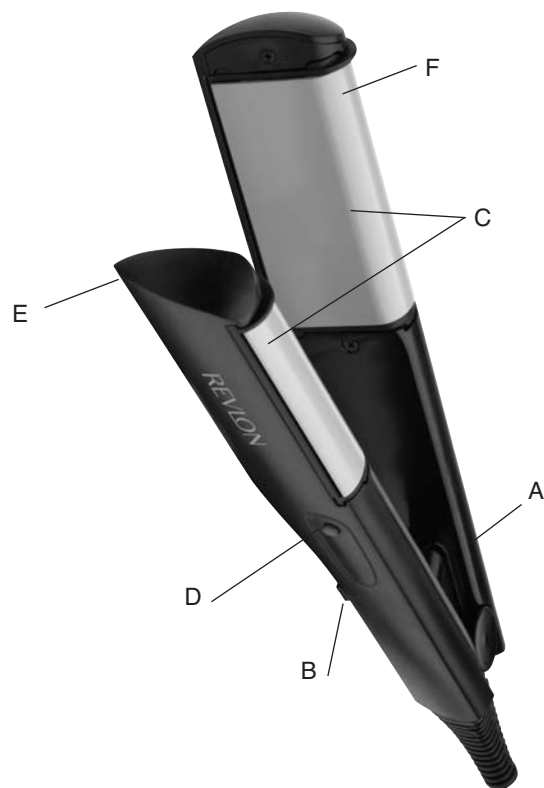

Appliance Features:

- A – Handle
- B – Rheostat
- C – Ceramic Heating plates
- D – “ON” indicator light
- E – Thin edge for straightening right at the root
- F – Thick edge for flicks and curling hair under

The appearance of your appliance may vary from the illustration above.

SAVE THESE INSTRUCTIONS

Read all instructions before using.

Important Safety Instructions

WARNING: Do not use this appliance near water contained in bath-tubs, basins or other vessels. This appliance is not intended for use by young children or infirm persons without supervision. Young children should be supervised to ensure that they do not play with the appliance.

WARNING: This appliance must not be taken into the bathroom. For additional protection, the installation of a residual current device (RCD with a rated operating current not exceeding 30mA is advisable in the electrical circuit. Ask your installer for advice.

Keep this appliance away from water. Never use appliance while bathing, in damp rooms, or over a hand basin or vessel filled with water. Neither should the appliance be used with wet hands nor immersed in water, held in running water, or allowed to become wet (e.g., as in splashing). Always unplug appliance when not in use. While using the hot appliance, do not let bare skin or eyes touch heated surfaces. Do not place heated appliance on any heat-sensitive surface when hot or when plugged in.

Note: Use on dry hair only. Do not use your straightener on synthetic hair wigs.

Heating the Appliance

Plug the appliance into a main's outlet. This unit does not have an on/off switch so the appliance will start to heat as soon as it is plugged into the mains. The indicator light will glow to indicate appliance is operating. Allow the unit a few minutes to heat up. Never leave this appliance on and unattended. To turn the appliance “OFF”, unplug it.

Cleaning

Always unplug the appliance from its power source after each use and allow it to cool. To clean, wipe the appliance and plates with a damp cloth. Make certain the appliance is completely dry before using. Keep heated surfaces clean and free of dust, dirt, styling sprays and gels.

Storage

When not in use “unplug it.”

Allow the appliance to cool and store it in a dry location. Never wrap the cord around the appliance, since this will cause the cord to wear prematurely and break. If the supply cord of this appliance becomes damaged, the appliance must be replaced by returning to the retailer from which the product was purchased or a similarly

qualified person in order to avoid a hazard. Regularly check the main cord for wear and damage, particularly where it enters the appliance and the plug.

WARNING: If any malfunction occurs, do not attempt to repair it. This appliance has no user-serviceable parts.

Styling

Hair should be clean and completely dry before using the appliance. Plug appliance into main and allow to heat up.

Straightening and smoothing

To straighten, separate a 5-cm section of hair, gently place the hair between the hot smoothing plates, and clamp down firmly on the handles. You will achieve the best results by working from the scalp to the ends of the hair. Leave in fine hair for 5 to 8 seconds and for 10 to 15 seconds in thick hair. Once hair is heated, slide the plates carefully down the isolated section, making sure the hair is heated and straightened all the way to the ends. (The ends will probably require less heat than the hair that grows closer to the scalp.) Hold ends of hair while smoothing the section. To remove hair, just release the pressure on the handles and allow the hair to gently slip out from the plates. Allow hair to cool before combing or brushing.

The super slim edge of this straightener allows straightening from the root, whilst the curved edge of this straightener is suitable for creating flicks or curling hair under at the ends.