



Foot Spa User Manual



Model No.: FM-516
Rev 1

READ AND SAVE THESE INSTRUCTIONS

Note: The specifications and/or components of this appliance are subject to change without prior notice.

1	Important Safety Instructions	3
2	Components.....	4
3	Operating Instruction.....	4
4	Care For Your Product.....	6
5	Farmers 1 Year Haven Home Collections Replacement Warranty	7


1 Important Safety Instructions

WARNING Before using your appliance, please read all instructions.

- Children should be supervised to ensure that they do not play with the appliance
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Use this appliance only for its intended uses as described in manual. Do not use corrosive chemicals or vapours with this appliance
- Unplug from electrical outlet when not in use, or cleaning. To unplug, grasp the plug and pull from power outlet. Never pull cord.
- To avoid risk of electrical shock, do not put the appliance in water or any other liquid.
- Never carry the appliance by the cord.
- Do not operate the appliance if it malfunctions, is dropped or damaged in any manner or has damaged cord or plug. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Do not reach for an appliance that has fallen into water. Switch 'OFF' at the power point and unplug immediately.
- Normal domestic/household use only. Do not use this appliance outdoors.
- Do not use this appliance with an extension lead.
- DO NOT MOVE this appliance when it is in operation.
- Ensure the packaging of this appliance is disposed of properly. Keep plastic bags away from babies and children.
- Do not leave the appliance unattended when switched on.
- If you have any concerns regarding your health, consult your doctor before using the Foot SPA Massager.
- Individuals with pacemakers should consult a physician before using this product.
- In case of pregnancy, diabetes or illness, consult your doctor before using this product.
- Massage should be pleasant and comfortable. Should pain or discomfort result, or if you experience pain in a muscle or joint for a prolonged period of time, stop use and consult your doctor.
- Never use any massager on open wounds, discoloured areas, or any areas of the body that are swollen, burned, inflamed or where skin eruptions or sores are present.
- If water leaks from the appliance, the appliance should no longer be used.
- No liability can be accepted for any damage caused by non-compliance with these instructions or any other improper use or mishandling of appliance.

READ AND SAVE THESE INSTRUCTIONS

2 Components

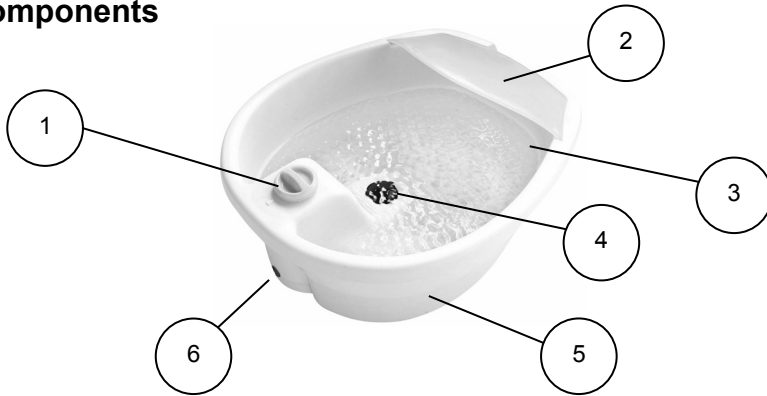

1	Control Switch	4	Infrared Dome
2	Splash Cover	5	Body
3	MAX Fill Line	6	Power Cord Entry

Note:

This Foot Spa Massager Does Not have a heating element built in to heat the water.

3 Operating Instruction

- Place the appliance on a flat level surface.
- Clip on the splash cover (2) if not already fitted.
- Fill with warm water. Ensure the unit is unplugged when filling
 - Do not fill over MAX indicator line (3)
 - Keep Children, Pets and Infirm persons away from hot water at all times.
 - Never pour water over the control switch.

Note: Always Test the water temperature before plunging your feet in to ensure it is not too hot.

- Ensure the selector switch (1) is set to “0”

- Plug in and switch on at power point.
- Set the Control Switch to either:

Switch Setting 0 = Off

Switch Setting 1 = Vibrate Only

Switch Setting 2 = Infrared Light Only

Switch Setting 3 = Vibrate and Infrared Light

- Whilst in the seated position, place your feet into the Foot Spa Massager.

Note: We recommend using this product for no longer than 20 minutes at a time.

Note: Never stand up in the Foot Spa Massager as you may damage the unit or injure yourself.

- To Use just the Vibration massage, set Control switch to setting 1 and rub your feet on the nodules on the bottom of the spa.
- To use the Infrared Light, select either Control switch setting 2 or 3, depending if you wish to have a vibrating massage at the same time, then place the bottom of your foot on top of the Infrared Dome and move your foot forward and backward over the Infrared Dome.

The Dome is designed with the foot contours in mind and can stimulate the muscles and nerves to help eliminate fatigue.

- When finished, remove both feet from the spa and turn the Control Switch to setting "0".
- For safety, dry both feet before standing up.
- To empty: first switch off and unplug the unit, remove the splash cover and tip the unit forward allowing the water to spill out over the front edge into the sink.

Note: Never pour water out over the Control Switch.

4 Care For Your Product

- To clean, simply rinse out with water. Never immerse the entire unit into water. If you wish you can wipe off all surfaces with a cloth dampened with water and a mild detergent, then rinse and dry.
- Do not clean the inside or outside with any abrasive cleaner, scouring pad or steel wool as this will damage and scratch the surface.
- Do not wash the appliance in the Dishwasher.
- To Store, be sure the unit is unplugged, cooled, emptied of water and dry.
- Store in a clean and dry place. Never hang the unit by the power cord.

DO NOT IMMERSE IN WATER OR ANY LIQUID

5 Farmers 1 Year Haven Home Collections Replacement Warranty

Your Haven Home Collections product is covered by a replacement warranty for a period of 1 year from the date of purchase from The Farmers Trading Company Ltd. During the warranty period, Farmers warrants to the original purchaser of this Haven Home Collections product that the product will be free from defects in materials or workmanship. If your Haven Home Collections product fails to operate satisfactorily, please return it to a Farmers store. You must supply proof of purchase from Farmers with all warranty claims.

The replacement warranty does not cover:

- Normal wear and tear
- Minor or cosmetic defects that do not affect the functioning of the product
- Damage
- Unreasonable use or use to an unreasonable extent

This warranty becomes invalid if we reasonably believe that the product has been damaged, subjected to unreasonable use, misused, abused, incorrectly installed, tampered with, connected to an electrical supply not corresponding with the name plate specification, or subjected to power surges.

This warranty does not limit or affect any rights a domestic purchaser may have under the Consumer Guarantees Act 1993. If you use this product for the purposes of a business, then to the greatest extent permitted by law, our maximum obligation to you will be limited to the replacement of the product within the warranty period.

DANGER: For your safety, you must not tamper with this Haven Home Collections product. Do not open the product. Do not attempt to service the product. This product contains no user serviceable components.

Important: Please retain this warranty card and your proof of purchase from Farmers

Name:

Address:

Date of purchase:

Name of product:

Model No.:

For customer service and product information in New Zealand please contact

Farmers Support Centre
21 Laidlaw Way
Flat Bush
Auckland
contactus@farmers.co.nz
0800 533 030

Read and Save These Instructions